

SK-03 Skin Analyzer User Manual

SK-03 provides visual and quantifiable of your skin and reveal what your mirror cannot. SK-03 adopts the state-of-art technology "Bio-Impedance Analysis (BIA)" to take a measurable approach to skin care and provide the skin profile scores such as moisture, oiliness and dead cell thickness.

SK-03 has elegant shape for easy carry.




The easy three steps let you know your skin anywhere and anytime.

Step 1, take off the cap and press the measurement key to power on.

Step 2, please put the two detecting dots on your skin tightly and SK-03 starts to measure your skin.

Step 3, when the measurement is completed, one beep signal appears. The LCD display will show the scores. Now, you can read the skin profile scores.

A . SK-03 provides numeric assessment. It is important tool for personal skin care and also very professional assistant for skin care consultant.

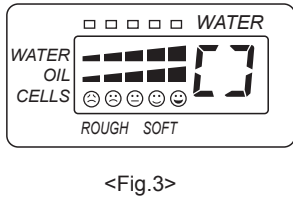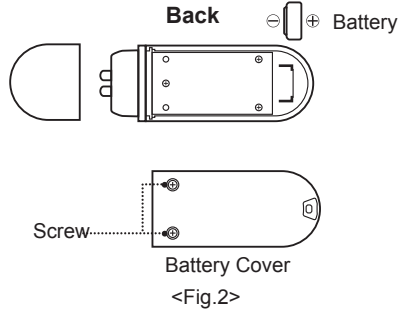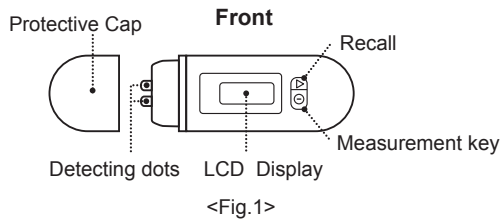

B . How to operate:


1. Press the measurement key. The icons on the LCD display will be lighted up from left to right, refer to <Fig.3> while device doing self-testing. Then, a 'Bi' signal will be heard and the symbols will be flashing to indicate the SK-03 is ready to measure the skin. Please place the two detecting dots tightly on the part of skin you want to measure for 3~4 seconds. After measurement is completed, one 'Bi' will be heard and now it is ready to read the scores.
2. SK-03 will power off automatically, if it is idle for 30 flashings.
3. Press SK-03 on skin again to take next measurement, when it is on. Or start a new operation from the point 1, when it is off.

D . Recall Function:

SK-03 has 5 sets of memory to recall last 5 measurements, please press "Recall" key to recall.

No.1 recall is the last measurement, No.2 is the second last measurement and so on.

The 5 points on the right figure are recommended, when user wants to check her/his skin condition of face.

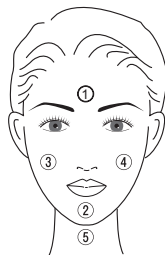

E . Score reference:

1. Water

Column	1	2	3	4	5
Percentage of water	<= 31%	32~36%	37~41%	42~46%	>= 47%
Skin Type	VeryDry Skin	Dry Skin	Normal Skin	Moisture Skin	Very moisture Skin

2. Oil:


Column	1	2	3	4	5
Skin Type	Very Dry Skin	Dry Skin	Normal Skin	Oil Skin	Very Oil Skin

3. Cells:

Column	1	2	3	4	5
Skin Type	Rough	Rougher than average	Average	Softer than average	Good

F . How to read reading:

1. WATER means moist/water level of skin.
2. OIL means oil level of skin.
3. CELLS means thickness of cuticle.
4. The icons are shown from left to right.
5. % means your REAL water % of skin

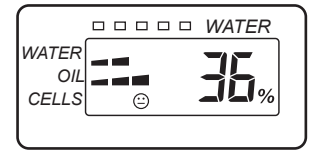

WATER and OIL, the higher the levels, the more icons are shown.

CELLS, face expression indicate the skin roughness or softness.

G . Specification

Model number	SK-03	Dimension	85*25*13 mm
Measurement method	Bio-Impedance Analysis	Display	LCD
Measurement range	Hydration from 25% to 55%	Battery	LR-44 x 1pcs
Operating Temperature	+ 10°C ~ + 40°C	Battery life	Approx. 1,000 times measurement

H . Warning :

1. Please use battery: LR-44
2. Please do not put battery in contrary direction, this may cause damage for SK-03.
3. Please keep the detecting dots clean and dry. Please wet the soft cloth with clean water and then clean the detecting dots. Please do not use alcohol or other liquid to clean it.
4. Please do not use SK-03 to measure the parts of wound or bleeding. If the person has allergy for metal, please do not use SK-03.

I . Warranty:

SK-03 skin analyzer is guaranteed for a period of one year from the date of purchase against mechanical and electrical manufacturing defects. There are no user serviceable parts inside the instrument. Any attempted repair by unauthorized persons voids the warranty.

J . SK-03 is offering a reference value of oil, moist and cuticle, not designed for medical purpose.